


REMOVE UNIVOLT'S +12V. WIRE FROM FUSE PANEL & ATTACH TO SHUNT TERMINAL AS SHOWN.

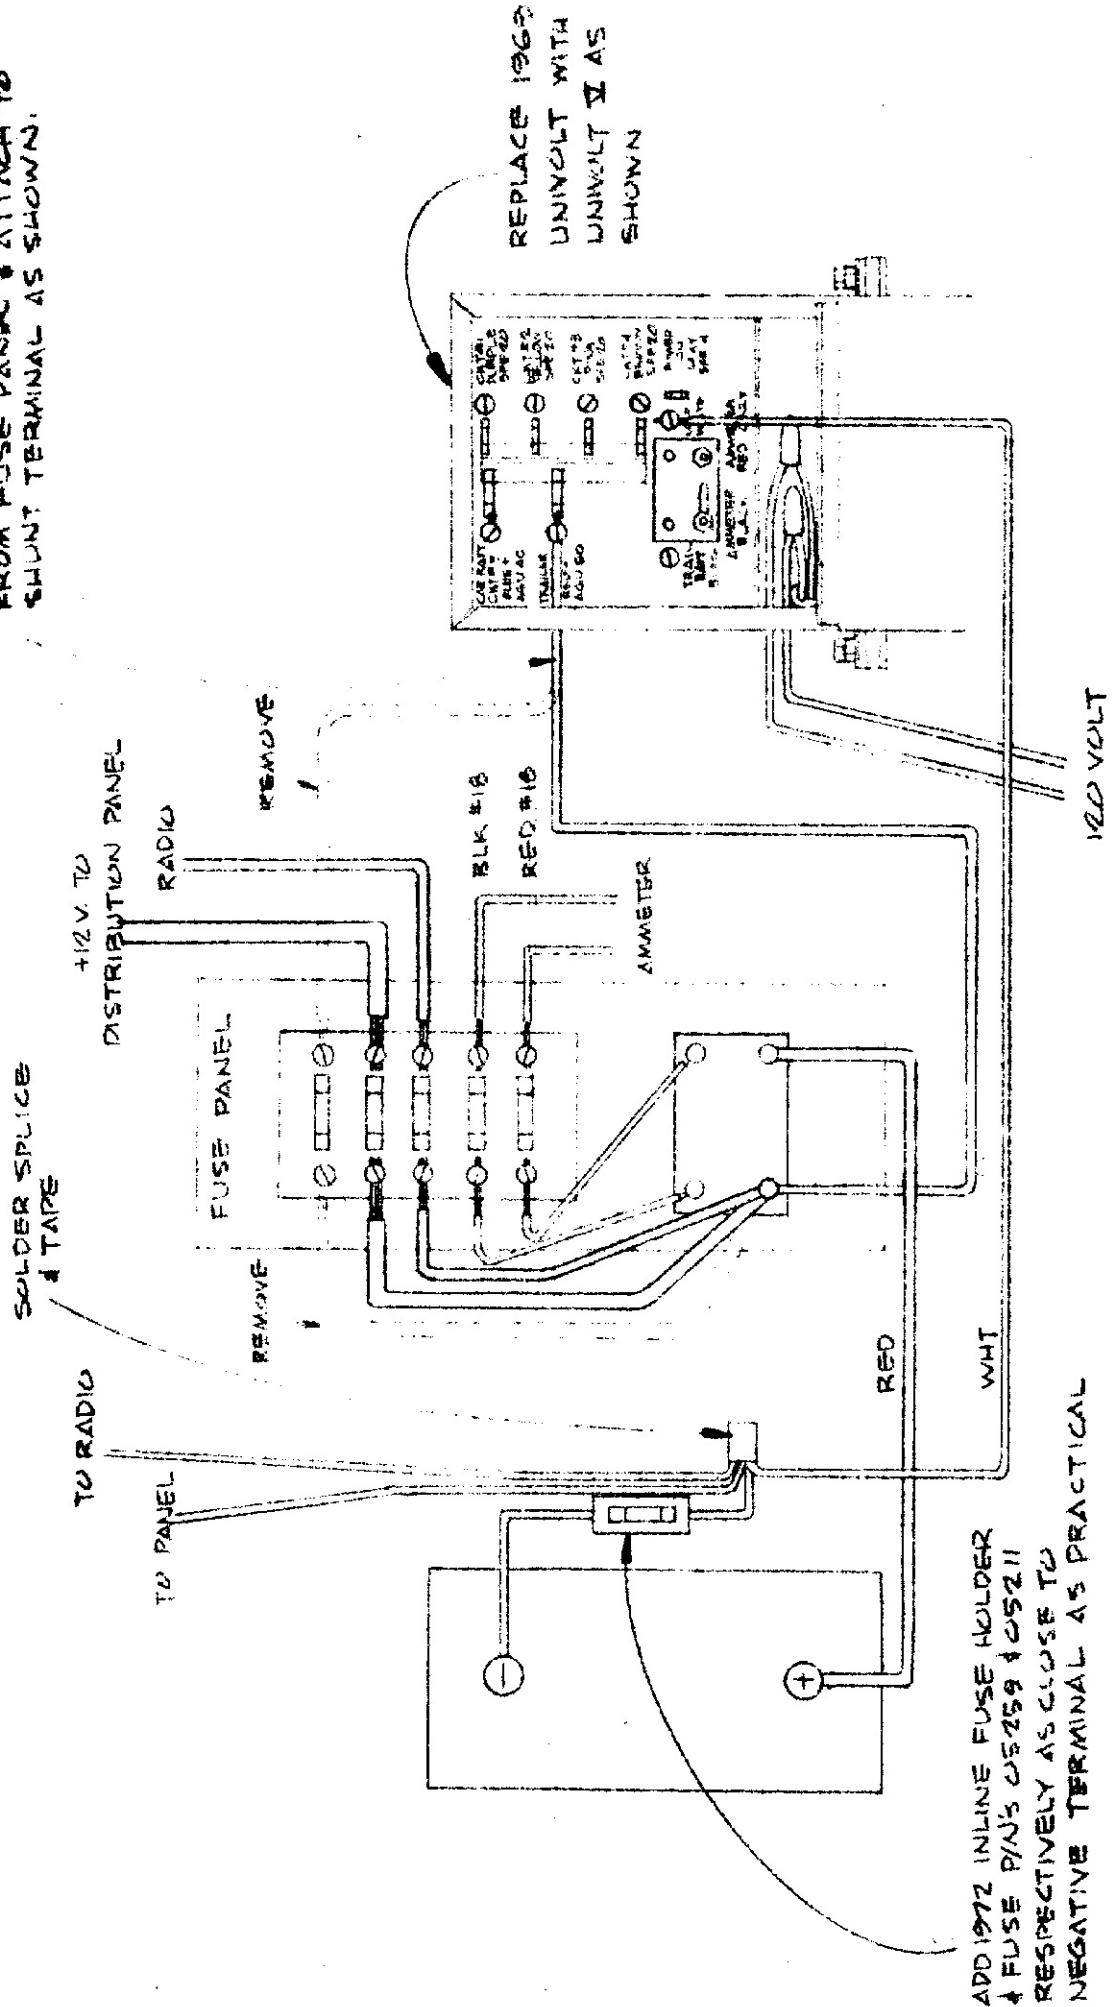

ADD 1972 INLINE FUSE HOLDER  
 ↓ FUSE P/N'S 05259 & 05211  
 RESPECTIVELY AS CLOSE TO  
 NEGATIVE TERMINAL AS PRACTICAL

# INSTALLATION OF UNIVOLT V IN 1969 TRAILERS